

PARTS LIST

Refer to the Exploded View Drawing for the location of parts listed below

ITEM	DESCRIPTION	ITEM	DESCRIPTION
1	SCREW M4*10	37	TRIGGER VALVE GUIDE
2	BUSHING	38	O-RING 5.5X1.5
3	EXHAUST COVER	39	SPRING
4	WASHER	40	TRIGGER VALVE STEM
5	SCREW M5*20	40a	SPRING
6	WASHER 5	41	WASHER
7	CYLINDER CAP	42	TRIGGER ASSEMBLY
8	GASKET	43	TRIGGER PIN
8a	SPRING	43a	RAIL
9	VALVE SEAL	44	FRONT PLATE
10	O-RING 15.7X2	45	SPRING PIN
11	O-RING 38.8X3	47	PLATE
12	VALVE	48	SCREW M4*16
13	O-RING 33.5X3.5	49	DRIVE GUIDE
14	STOPPED WASHER	50	SPRING PIN
15	COLLAR	51	MOVABLE MAGAZINE
16	O-RING 50.5X2.5	52	FEEDER SHOE
17	O-RING 28.3X3	53	SPRING
18	PISTON ASSEMBLY	55	FIXED MAGAZINE
19	CYLINDER	56	SCREW M4*6
20	O-RING 36.3X2.5	57	MAGAZINE PLATE
21	O-RING 35.3X2.5	58	LOCK
22	BUMPER	58a	SPRING
23	BODY	59	SCREW M4*14
24	JOINT GUIDE	59a	BUSHING
25	SAFE GUIDE	60	JOINT GUIDE
26	SPRING	60a	WASHER 4
27	SAFE BRACKET A	61	STOPPED SCREW M4*6
28	SAFE BRACKET B	62	SUPPORT
29	SAFE BRACKET C	62a	NUT
29a	SAFE RUBBER	63	NUT
30	LATCH SLEEVE	64	SCREW M5*18
31	LATCH ASSEMBLY	65	SOFT GRIP SLEEVE
32	SPRING PIN	66	GASKET
33	SPRING PIN	67	END CAP
34	SEAL	68	SCREW M4*16
35	TRIGGER VALVE HEAD	69	AIR PLUG
36	O-RING 15X1.9		

